



NJORD

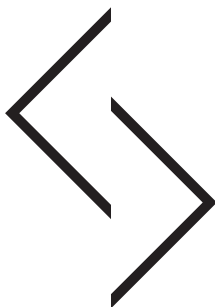

BEARD TRIMMER
MANUAL

Parts

1. Comb attachment
2. ON/OFF switch
3. Indicator light
4. Blade subset
5. USB cable
6. USB socket
7. Lubricating oil
8. Cleaning brush

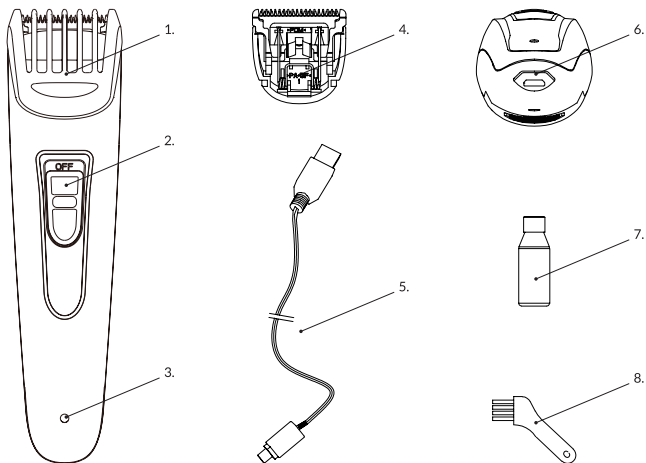**Before using your trimmer**

The trimmer is a cordless, rechargeable beard trimmer designed for home use.

When the comb (1) is attached, you have a total of 9 steps of cutting length positions: 2, 4, 6, 8, 10, 12, 14, 16 and 18 mm.


Before using the trimmer for the first time, please charge for 8 hours fully.

How to charge the trimmer


1. Connect the small end of the USB cable (5) with the USB socket (6), which is located in the bottom of the trimmer.
2. Connect the other end of the USB cable with a power supply (5V/1A).
3. When charging, the indicator light (3) is red. The full charging time is 8 hours. When fully charged, the operating time is more than 45 minutes.

How to use the comb attachment


1. Make sure, that the trimmer is turned off (2) and the trimmer's comb function is in un-lock mode.

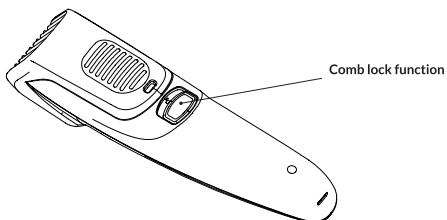

2. Attach the comb. Push it down with the open side on operating side of the trimmer. See image.

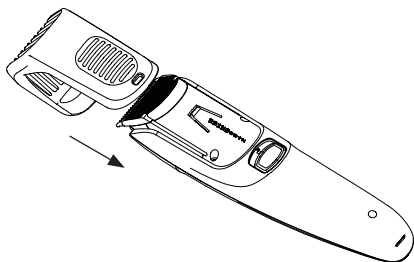


3. Slide the comb attachment up or down to reach desired cutting length on the back of the trimmer.

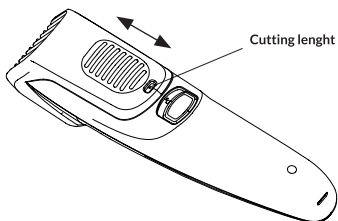

4. When the cutting length has been chosen, remember to lock the comb (see step 1) before using the trimmer.

How to maintain and clean your trimmer

1. Remove the comb attachment (1). Remember to unlock the comb lock-function.
2. Push the top (where the blades are located) of the blade subset unit (4) in the direction shown below on the side view with your thumbs. The unit will be released from the trimmer and you can remove it.

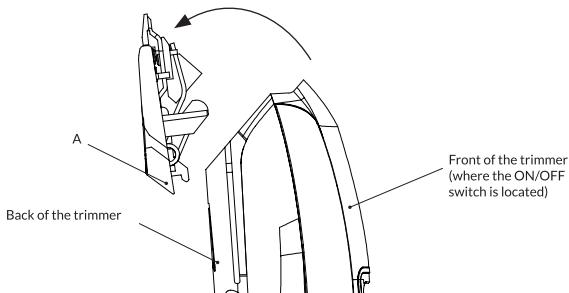


3. Clean both the removable blade unit and the trimmer with the cleaning brush (8).
4. Add 2-3 drops of the lubricating oil (7) onto the movable and stationary blades. The blades must be cleaned and oiled regularly.
5. Insert the blade unit back into the trimmer. Start with placing the bottom of the blade unit in position on the trimmer (See A on the side view above), and then push it back in place. You will hear a "click" when fully attached.
6. Finally, point the trimmer down and away from you, and turn it on. This spreads the oil evenly and expels any excess.

IMPORTANT SAFETY INSTRUCTIONS

- Don't charge if the temperature is lower than 0 °C (32 F) or higher than 40 °C (104 F).
- Don't charge, if located in direct sunlight or close to heat sources.
- The standard charging time is 8 hours. In order to avoid damaging the batteries please don't extend the charging time.
- When cleaning the body of the trimmer only use a cloth with slightly damped water or a mild soap solution.
- Never use a caustic solution.
- Never submerge the trimmer in water.
- Keep away from children.
- The trimmer may become warm while operating or charging. This is normal.
- When using the trimmer, remove the USB cable from it in order to prevent possible harm and avoid accidents.
- Never tamper with the moving part.

Dele

- | | |
|-------------------------------|----------------|
| 1. Afstandskam | 5. USB kabel |
| 2. Tænd/Sluk knap | 6. USB indgang |
| 3. Indikatorlampe (opladning) | 7. Smørelolie |
| 4. Aftagelig skærebords-enhed | 8. Børste |

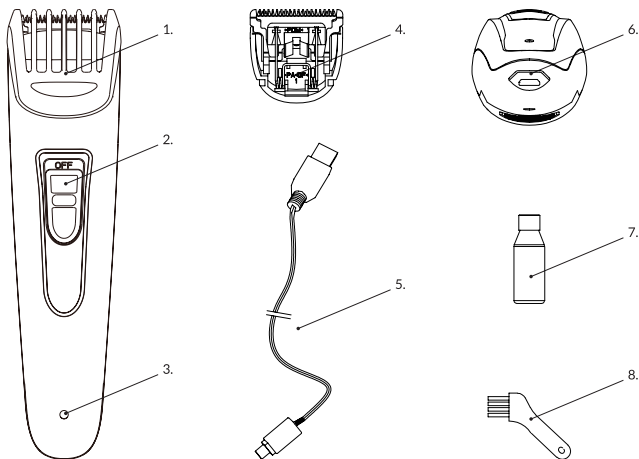**Før trimmeren tages i brug**

Trimmeren er en ledningsfri, genopladelig skægtrimmer til hjemmebrug.

Når afstandskammen (1) er sat på, har du 9 forskellige klippelængder at vælge imellem: 2, 4, 6, 8, 10, 12, 14, 16 and 18 mm.


Før du tager trimmeren i brug første gang, skal den lades helt op i 8 timer.

Sådan oplader du trimmeren


1. Tilslut den lille ende af USB kablet (5) til USB indgangen (6) i bunden af trimmeren.
2. Tilslut den anden ende af USB kablet til en strømforsyning (5V/1A).
3. Indikatorlampen (3) lyser rødt, når der oplades. Den fulde opladningstid er 8 timer. Når trimmeren er fuldt opladet, er brugstiden mere end 45 minutter.

Sådan bruges afstandskammen


1. Tjek at trimmeren er slukket (2) og at låsefunktionen til afstandskammen står til "ulåst".

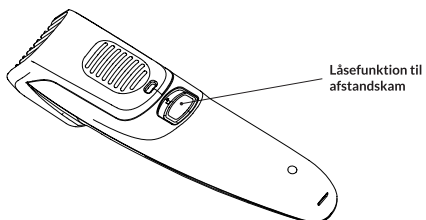

2. Påsæt afstandskammen. Skub den ned over trimmerhovedet med den åbne side af afstandskammen på samme side som Tænd/Sluk knappen (2). Se billede.

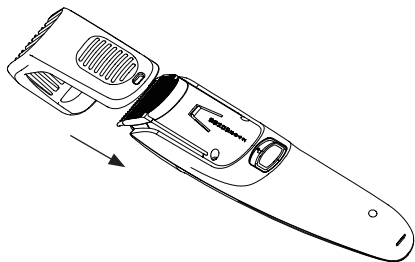


3. Skub afstandskammen op og ned for at opnå den ønskede klippelængde på bagsiden af trimmeren.

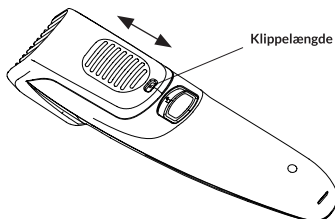

4. Når den ønskede klippelængde er valgt, skal låsefunktionen til afstandskammen ændres til "låst" (se punkt 1) før den tages i brug.

Sådan vedligeholder og renser du din trimmer

1. Fjern afstandsskammen (1). Husk at sætte låsefunktionen til "ulåst".
2. Skub toppen (hvor bladene sidder) af den aftagelige skæreblads-enhed (4) bagover med dine tommelfingre. Se billedet nedenunder, hvor trimmeren er set fra siden. Enheden vil nu kunne tages af.

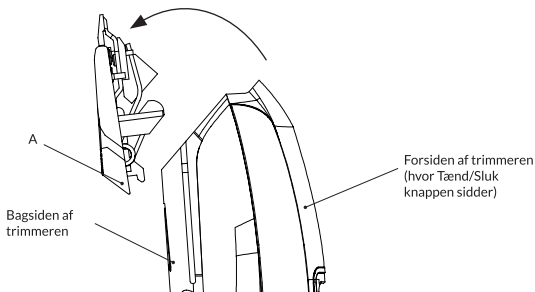

3. Rengør både den aftagelige skæreblads-enhed og resten af trimmeren med børsten (8).
4. Tilføj 2-3 dråber af smøreolie (7) på de bevægelige og stationære skæreblade. Skærebladene skal rengøres og smøres regelmæssigt.
5. Monter den aftagelige skæreblads-enhed på trimmeren igen. Start med at placere bunden af skæreblads-enhedens kant (A), hvor den skal sidde på trimmeren og flip den tilbage på plads. Modsat bevægelse af, da den blev skubbet af. Du vil høre et "klik", når den sidder korrekt.
6. Når skæreblads-enheden er sat på, vender du trimmerhovedet nedad og væk fra dig og tænder for trimmeren. Det vil fordele olien ligeligt på skærebladene og fjerne overskydende olie.

VIGTIGE SIKKERHEDSINSTRUKSER

- Oplad ikke trimmeren, hvis temperaturen er under 0 °C eller over 40 °C.
- Oplad ikke trimmeren, hvis den ligger i direkte sollys eller tæt på varmeapparater.
- Standard opladningstid er 8 timer. Oplad ikke trimmeren længe end dette, da det vil forringe batteriet.
- Brug kun en hårdt opvredet klud med vand eller mild sæbe til at rengøre resten af trimmeren.
- Brug ikke hårde eller ætsende rengøringsmidler på trimmeren, skærehovederne eller bladene.
- Udsæt ikke skæreenhederne for hårde tryk eller hårde genstande.
- Sænk ikke trimmeren eller delene ned i vand, da der vil opstå skade på dem.
- Dette apparat er kun til husholdningsbrug.
- Sørg for, at apparatet er udenfor rækkevidde for børn.
- Trimmeren kan godt blive varm, når den er i brug eller lader op. Det er helt normalt.
- Fjern USB kablet fra trimmeren før brug.
- Skil ikke skæreenhederne ad.

